

**WHAT YOU NEED:**

- 1/8" Drill Bit
- Drill
- A friend to help you install the cover or self-adhesive velcro to hold the cover up in place

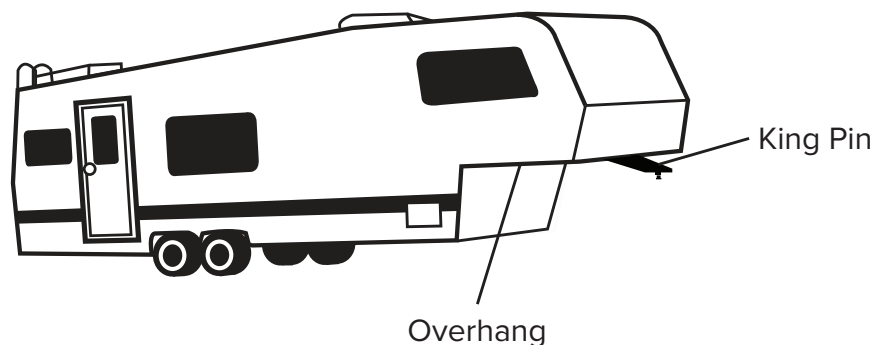
**Before installing your cover make sure it is the correct size.**

**To properly determine the correct size, measure the following:**



Length of Driver's Side Overhang + Length of Passenger's Side Overhang + Width of Your 5th Wheel Trailer

This dimension will give you the cover size length you need. Make sure to give yourself a few inches extra on each side so that the cover will close off the entire overhang opening.

**INSTALLATION:**

1. Center the Cut-Out to your king pin.
2. If your trailer does not have a protruding king pin, there is a cap with Velcro provided so you can close off the cut-out.
3. With the cover centered on the king pin, mark where the first two snaps to the right and left of the king pin on your 5th Wheel Trailer. Use those markings to drill your first two holes.
4. Screw in the Snap Screw into the right hole and then do the same on your left hole. The head of the screw will be the male end of your snap.
5. Choose a side and drill and screw in the next two Snap Screws.
6. Go to the opposite side and drill and screw in the next two Snap Screws.
7. Alternate drilling and screwing in Snap Screws on each side of your 5th Wheel Trailer until you have got all Snap Screws installed.
8. Snap your cover onto your newly installed Snap Screws.
9. To secure your cover further use the included stakes through the grommets on the bottom to secure it into soft ground.
10. Your Storage Skirt is now installed.