


# CLASS B & CLASS C DELUXE SEE-THROUGH WINDSHIELD COVER



Installs With  
No Drilling

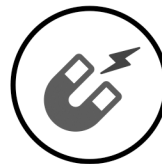

Installs With Magnetic  
Fasteners

## Installation:

1. Center cover on windshield.
2. Place security pockets over open door corners, then close doors.
3. Done!

